



PART NUMBER

PFF85-1822

DESCRIPTION

Lower Torque Mount Insert

INSTALLATION GUIDE

Contents (parts per pack):

1 x Polyurethane Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the lower torque mount from the vehicle.
2. Clean any dirt from the voids in the original bush and remove any flash lines.
3. Insert the Powerflex bush into the top of the mount, as shown in Fig 1 and Fig 2.
4. Refit the torque mount to the vehicle and tension all hardware to the manufacturer recommended torque settings.

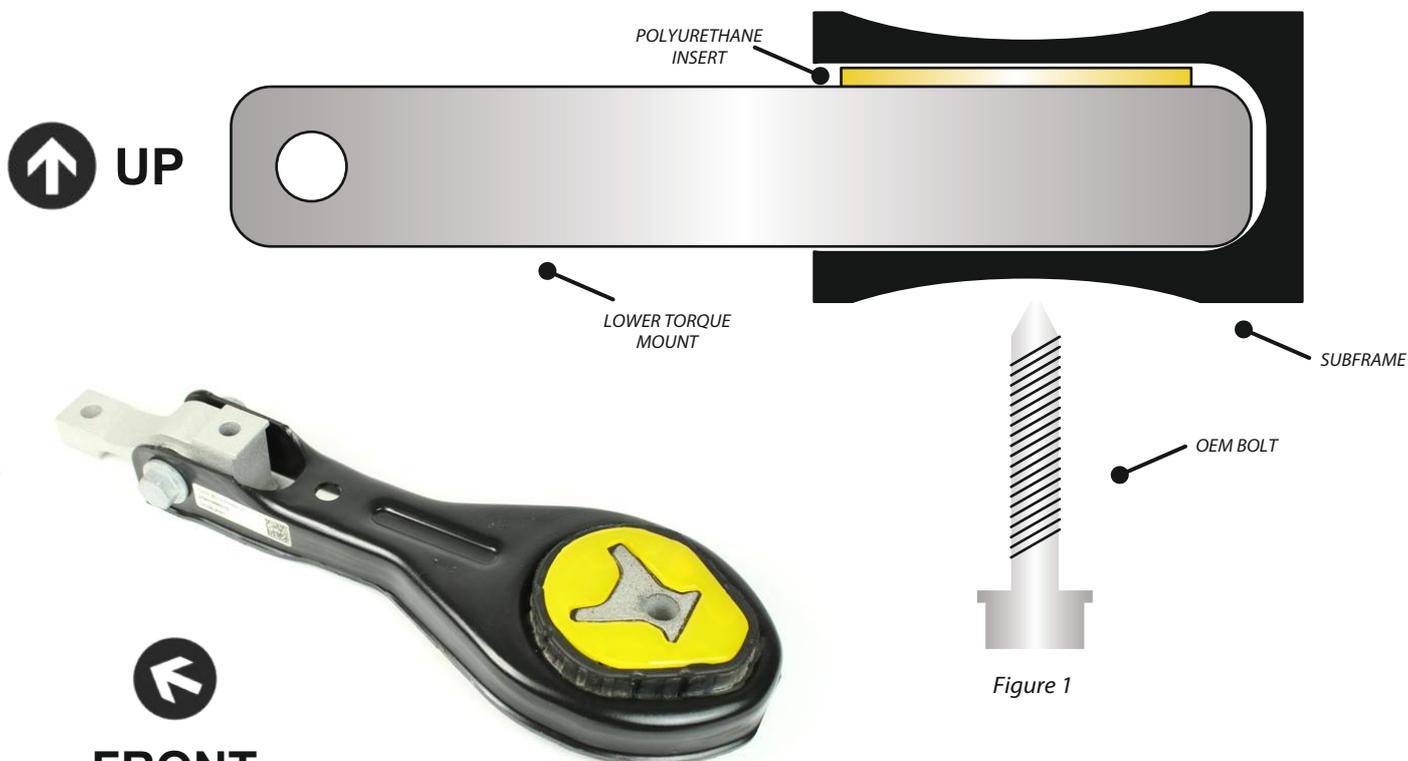


Figure 1



Figure 2