

POWERFLEX®

PART NUMBER

PFR19-707

DESCRIPTION

REAR BEAM MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the original rubber bush from the rear beam.
2. Clean any dirt and corrosion from the bore of the beam and file off any sharp edges.
3. Insert the polyurethane bush from the outside of the beam so that the lip of the bush is facing towards the outside.
4. Apply some of the supplied grease into the bore of the polyurethane bush and insert the stainless steel sleeve so that it sits flush inside the bush.
5. Refit the rear beam back to the vehicle and tension all hardware to manufacturers recommended torque settings.

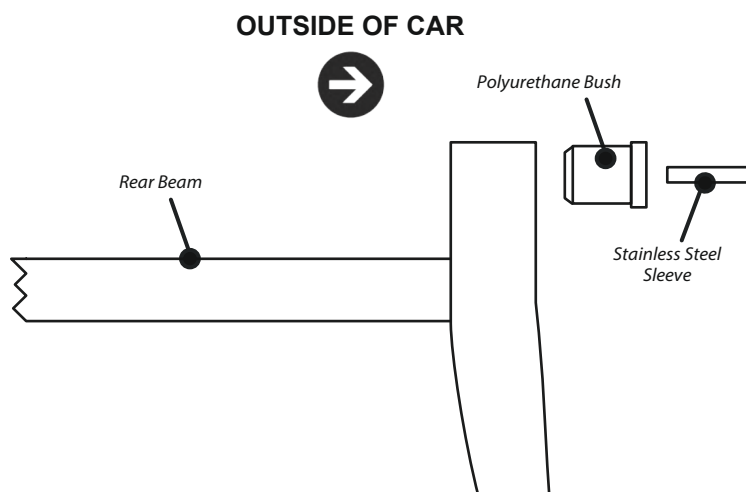


Figure 1 - how the polyurethane bush fits in the rear beam (top view)