

POWERFLEX®

PART NUMBER

PFR5-6031

DESCRIPTION

REAR DIFF REAR MOUNTING BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------------|----------------------------|
| 1 x Polyurethane Bush | 1 x PTFE/Silicone Grease |
| 1 x Stainless Steel Sleeve | 1 x Stainless Steel Washer |
| 1 x Zinc Plated Mild Steel Washer | |

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion, remembering to also file away any sharp edges.
2. Insert the Polyurethane Bush into the bore of the subframe, ensuring that the top hat is facing the front of the car and the bush sits flush in the bore.
3. Apply some of the supplied grease to the outer surface of the Stainless Steel Sleeve and insert it into the bore of the Polyurethane Bush, ensuring it sits flush within the bore.
4. Insert the Stainless Steel Washer (with the filleted edge inserted in first) into the recess of the Polyurethane Bush, ensuring it sits flush within the recess.
5. Place the Zinc Plated Mild Steel Washer on the other side of the Polyurethane Bush and refit the subframe, remembering to tension all hardware to manufacturers recommended torque settings.

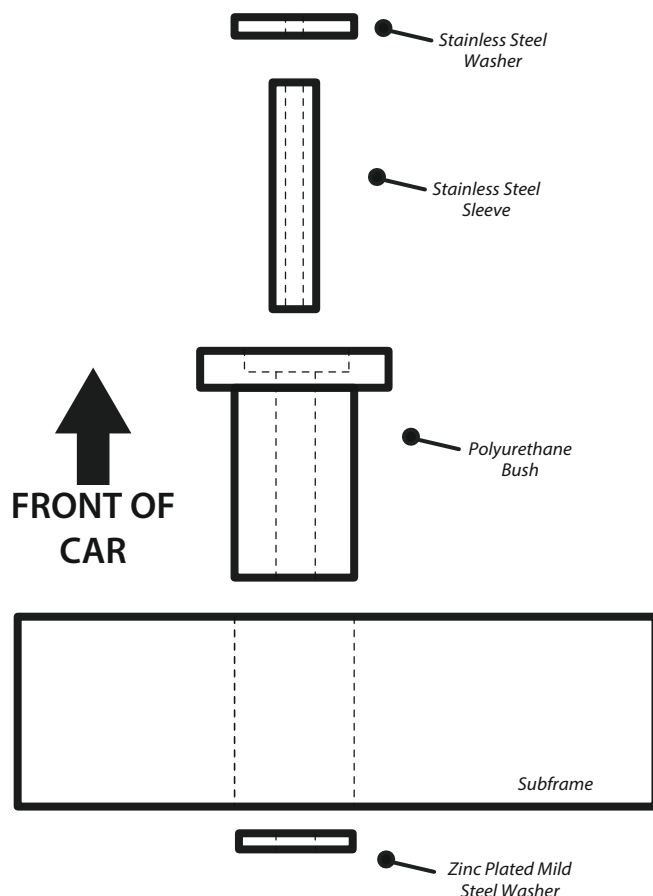


Figure 1